

PARTS LIST :

NO	DESCRIPTION	PARTS NO	Qty	REMARK
1	Finger Grip	BP80101000	1	
2	Air Fitting	BP80102000	1	
3	Switch	BP80103000	1	
3-1	Trigger & Pin	BP80103100	1	
4	Body Screw	BP80104000	1	
5	Air Plunger	BP80105000	1	
6	Short Spring Kit	BP80106000	1	
7	Housing Cap	BP80107000	1	
8	Adapter	BP80108000	1	
9	Hexagonal Spout	BP80109000	1	
10	Air Vent Valve	BP80110000	1	
11	Filler Plug	BP80111000	1	

NO	DESCRIPTION	PARTS NO	Qty	REMARK
12	Gasket	BP80112000	1	
13	Plunger Nut	BP80113000	1	
14	Plunger Washer	BP80114000	1	
15	Plunger	BP80115000	1	
16	Backlash Gasket	BP80116000	1	
17	Long Spring Kit	BP80117000	1	
18	Container Tube	BP80118000	1	
18-1	Bottom Cap	BP80118100	1	
19	Piston Rod	BP80119000	1	
20	Plunger Handle	BP80120000	1	
21	Catch Plate	BP80121000	1	

OPERATION INSTRUCTION

801.V2/06

1. Add oil daily through air inlet before use.
2. Filler plug is used for lubricants filling from filler pump.
3. There are three ways of grease loading, cartridge loading, suction filling and loading with filler pump.
4. Trigger should be pressed thoroughly during operation.
5. Recommended working pressure: 90 PSI (6.2 Bar)

If your gun fails to work, it is due to air pockets in the gun. To remove the air, unscrew the gun head 1 to 1-1/2 turns and act as follows:

- Step 1 :Draw back plunger rod fully and release quickly, repeat several times. Push plunger rod all the way in. Tighten the head to the barrel.
- Step 2 :Press air vent valve several times to release the air.

Now your gun is ready to use.

Do not use MULTI-LOADING alternately, please decide to use a long-period and proper loading way initially (depends on the variety of grease that your local supplier applied) and use it incessantly without change.



Fig. 1: Cartridge LoadingSuction

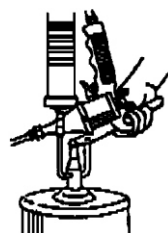


Fig. 2: Loading with Filler Pump



Fig. 3: Loading with Bulk Filling